

Name Remove/install pilot bushing of electrohydraulic controller unit

Document number ar2719d4980a

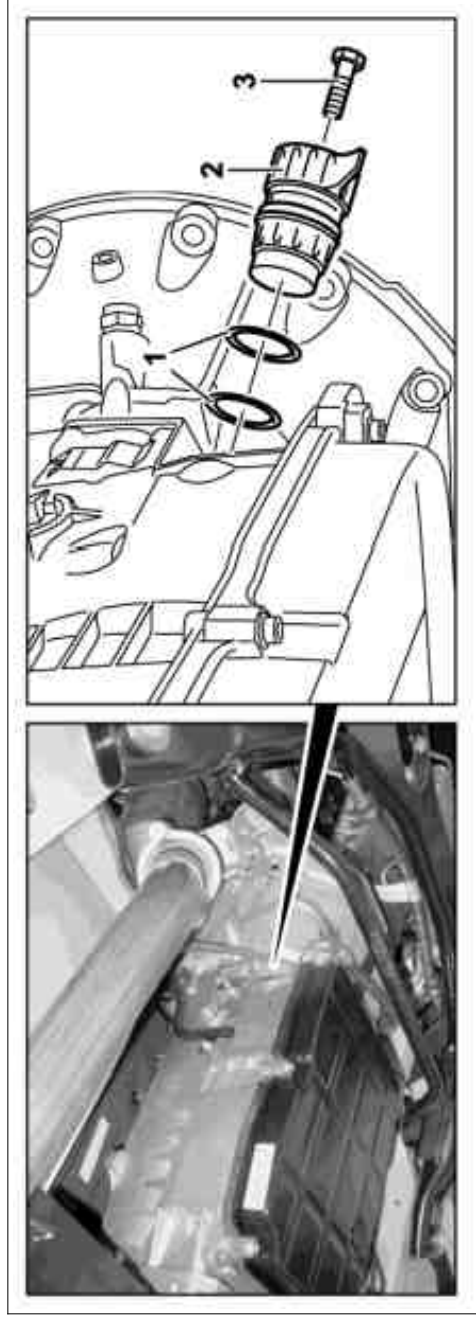
Document title Remove/install pilot bushing of electrohydraulic controller unit

AR27.19-D-4980A Remove/install pilot bushing of electrohydraulic controller unit **27.8.07**



TRANSMISSION 722.681 in MODEL 902.6, 903.6, 904.6, 905.6

TRANSMISSION 722.681 in MODELS WD1, WD2, WD3, WD6, WD7, XD1, XD2, XD3, XD4, XD5, XD6, XD7, YD1, YD2, YD3, YD4, YD5, YD6, YD7

- 1 O-rings
- 2 Pilot bushing
- 3 Screw



D27.19-1124-04

	Remove/install	Remove/install	
	Risk of explosion caused by oxyhydrogen gas. Risk of poisoning and caustic burns caused by swallowing battery acid. Risk of injury caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries Disconnect battery ground line	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and glasses. Only pour battery acid into suitable and appropriately marked containers. i Isolate ground lead to prevent accidental contact.	AS54.10-Z-0001-01A
	Notes on battery		AH54.10-P-0001-01A
2	Detach electrical connector.		AR27.19-D-0750-01B
3	Unscrew bolt (3) and remove pilot bushing (2)	i Catch oil running out. Replace O-rings (1).	

